


Tonneau Cover (With Sports Bar)







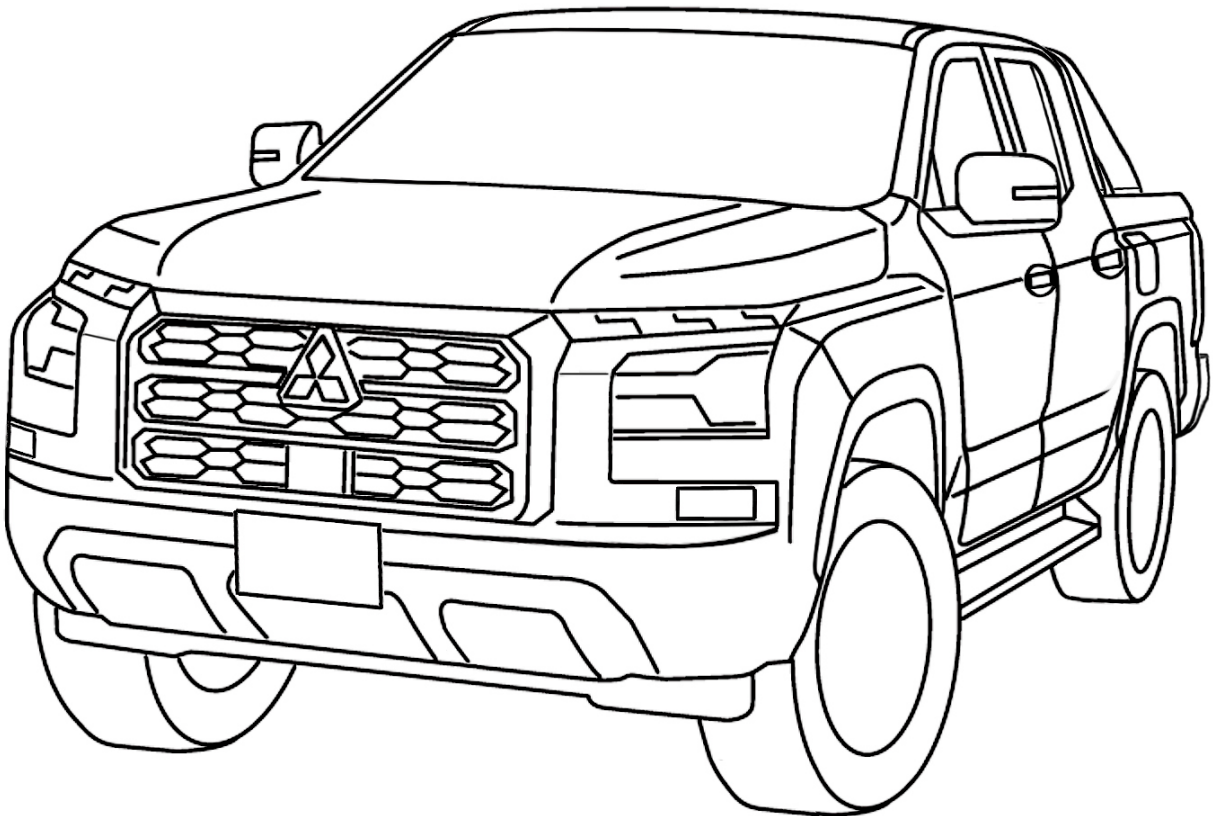

Installation and Owner's manual

LA0 – Parts No. MZ350796

- Thank you for purchasing the Mitsubishi Motors genuine accessory.
- The initial installation quality determines the level of performance, durability and trouble occurrence in the future.
- Make sure to read this manual carefully before installation of the product, and install it correctly after understanding an overall operation flow. Do not attempt installation other than instructed in this manual. We shall not be responsible for any failures occurred by not following the instructions in this manual.
- We recommend you to have the installation performed at an authorized Mitsubishi Motors dealer to ensure the reliability.

日本語のご用意もあります、詳しくは販売店にご確認ください。日本向け部番: MZ577119



								
MZ350796	✓	✓	x	x	✓	✓	✓	✓

Symbol meaning



Warning

This symbol indicates a particularly important safety instruction. Read and follow it carefully for safety. Failure to heed the caution may result in death or serious human injuries.



Caution

This symbol indicates a particularly important safety instruction. Read and follow it carefully for safety. Failure to heed the caution may result in human injuries or accidents.



Note

This symbol indicates an advisory instruction to follow during installation and handling.

Precautions for installation


Warning




Perform the installation indoors that is large enough without worrying about the rain and wind. Make sure the work area is well ventilated and take special care for the fullness of exhaust gas.

- Do not install to the vehicles except for the applicable types.
- Do not install with remodeling. Failure to heed this caution may result in serious accidents.

Caution

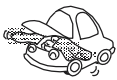

Work carefully using a protective cover to prevent the vehicle from scratches and dirt.

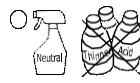

Wipe off the dirt of the product using a sponge with a neutral detergent. Do not use organic solvents such as thinner, acids and alkalis.




When removing and reinstalling the vehicle body parts, refer to the vehicle's workshop manual.




When installing the parts and reinstalling the removed vehicle body parts, be careful not to let vehicle harnesses be caught and pinched between parts.



Be careful not to make a mistake when reinstalling the clips, screws, etc. removed from the vehicle.

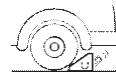

When jacking up the vehicle, make sure to use wheel chocks and work on a flat place.

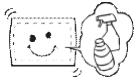

Remove dirt and oil on the surface where the parts are installed with a tape or double-sided tape completely.



Tighten securely parts which the tightening torque is indicated according to the specified torque.



When removing connectors, hold the connector bodies and unlock without pulling on harnesses. Do not destroy the connector lock by prying with a screw driver. Keep the harnesses away.




Do not pull on wiring harnesses strongly.

SAFETY NOTES

- Ensure that appropriate Personal Protective Equipment is used.
- During the accessory fitment, ensure all Australian automotive and dealership safety practices are followed.
- Always refer to the vehicle's workshop manual when removing components.
- Never use a powered drill to screw the bolts. Always do this by hand with the tool provided to prevent damage to the fasteners.




- PARTS SUPPLIED

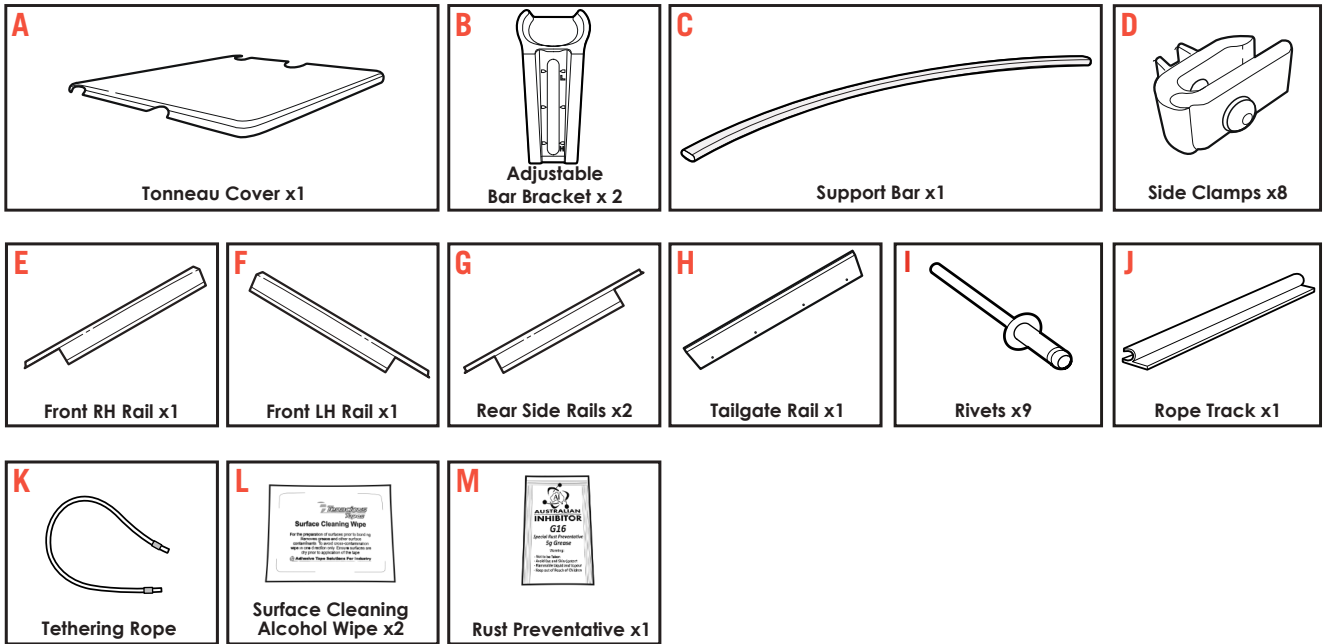


- ADDITIONAL PARTS

- For vehicles with a Tub Liner already installed, a Tub Liner re-install kit will be required. Tub Liner re-install kit available through the Mitsubishi dealer.

- TOOLS REQUIRED

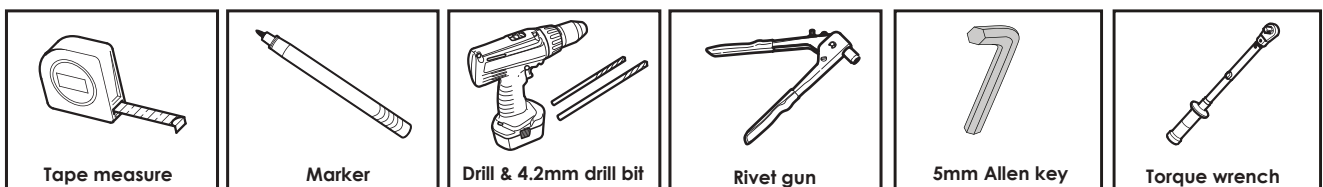


— FINAL ASSEMBLY —

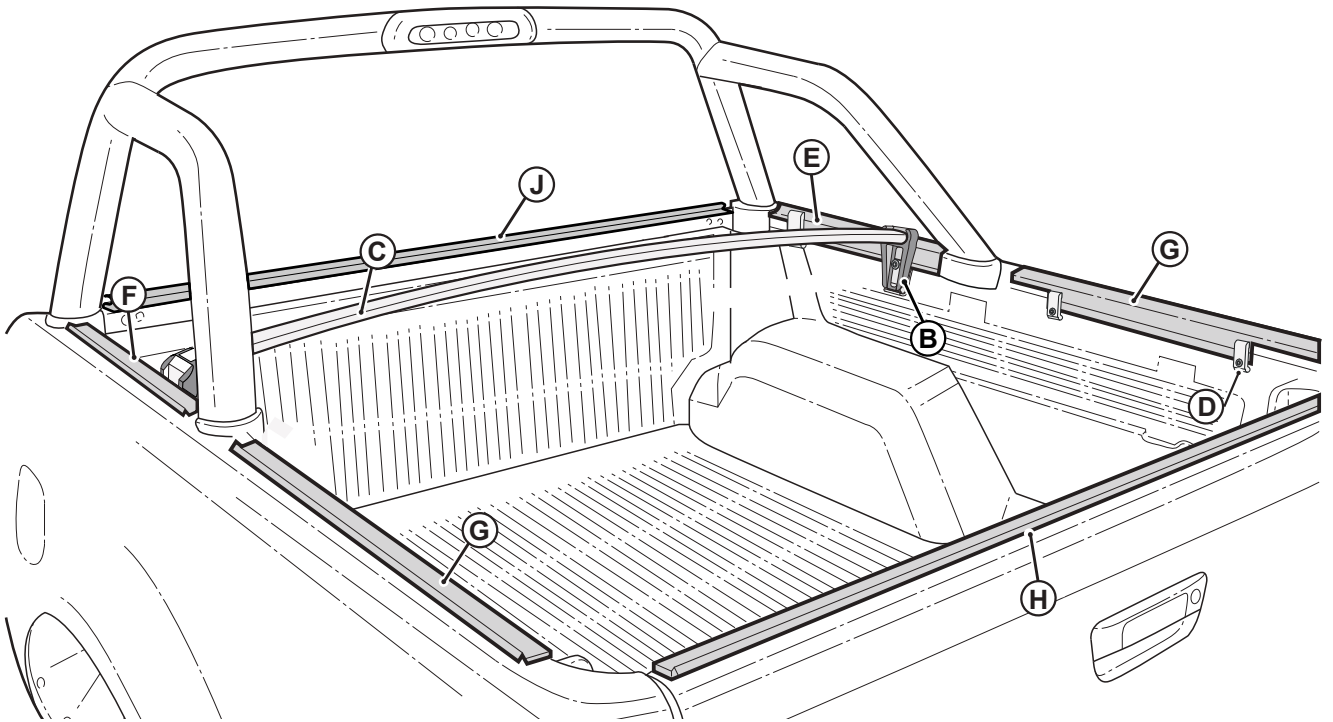


1 ATTACHING THE ROPE TRACK

- Align the opening of the rope track (J) with the front of the tub.
- Center the rope track into position.
- Mark the 5 hole positions on the tub using the rope track as a template with equal spacing. Then remove rope track before drilling the holes.
- Drill 5 holes using a 4.2mm drill bit into marked positions.
- Deburr and remove shavings after drilling. Clean with surface cleaning wipe (L). Carefully apply rust preventative (M) into drilled holes.
- Remove backing from double sided tape and place rope track into position.
- Rivet rope track into place using rivets (A).


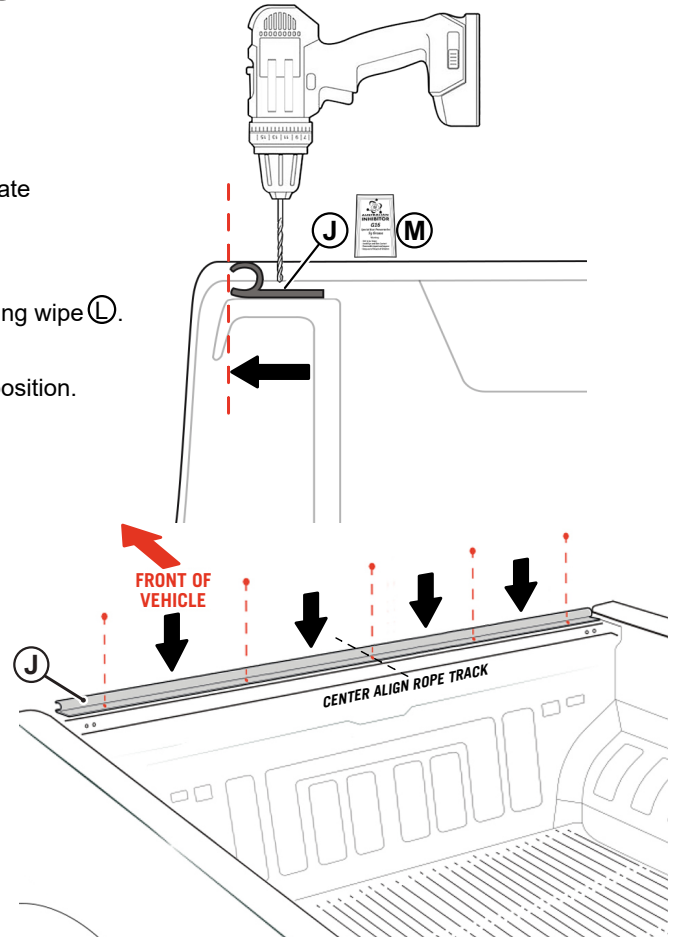


2 ATTACH FRONT SIDE RAILS

Important
 The side clamps (D) need to be placed and engaged as high as possible to ensure good grip on sheet metal.

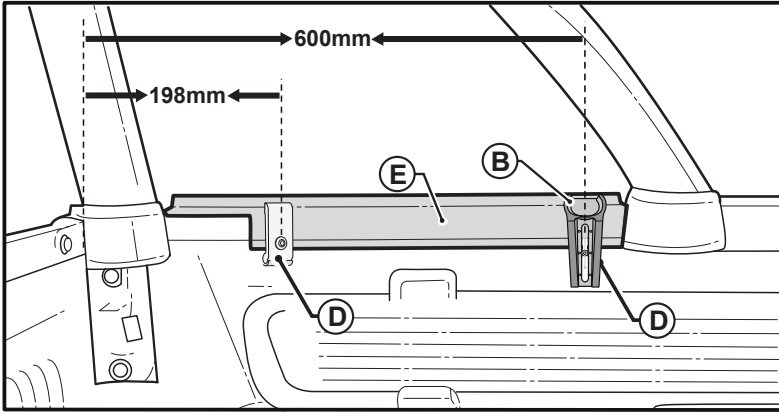


- Place the front rail (E) centered between the sports bar legs.
- All clamps are to be tightened to 15 Nm.
- Attach the adjustable bar bracket (B) along with side clamp (D) at 600mm from the front inner corner of the tub.
- Attach the second clamp (D) at 198mm from the front inner corner of the tub.
- Repeat for LHS with front rail (F). **Dimensional Tolerance +/- 3mm**

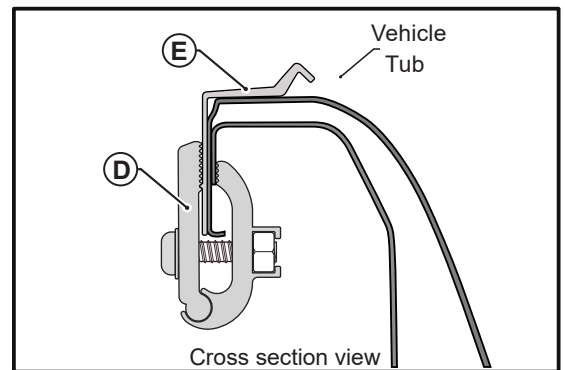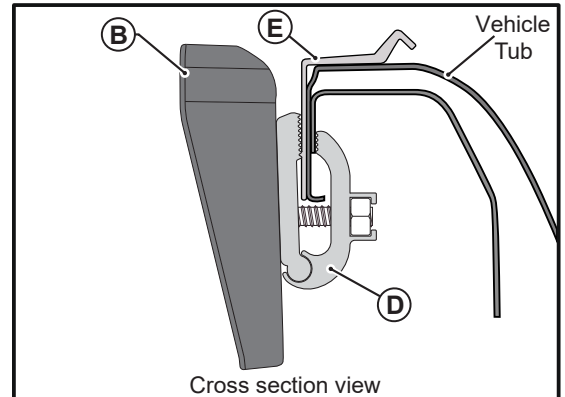


3 ATTACH REAR SIDE RAILS

- Place rear side rail (G) flush up against the rear sports bar legs as shown in the figure below.
- All clamps to be tightened to 15 Nm.
- Attach one clamp (D) 934mm and second clamp at 1230mm from the front inner corner of the tub.
- Repeat for second LHS rear side rail.

Dimensional Tolerance +/- 3mm

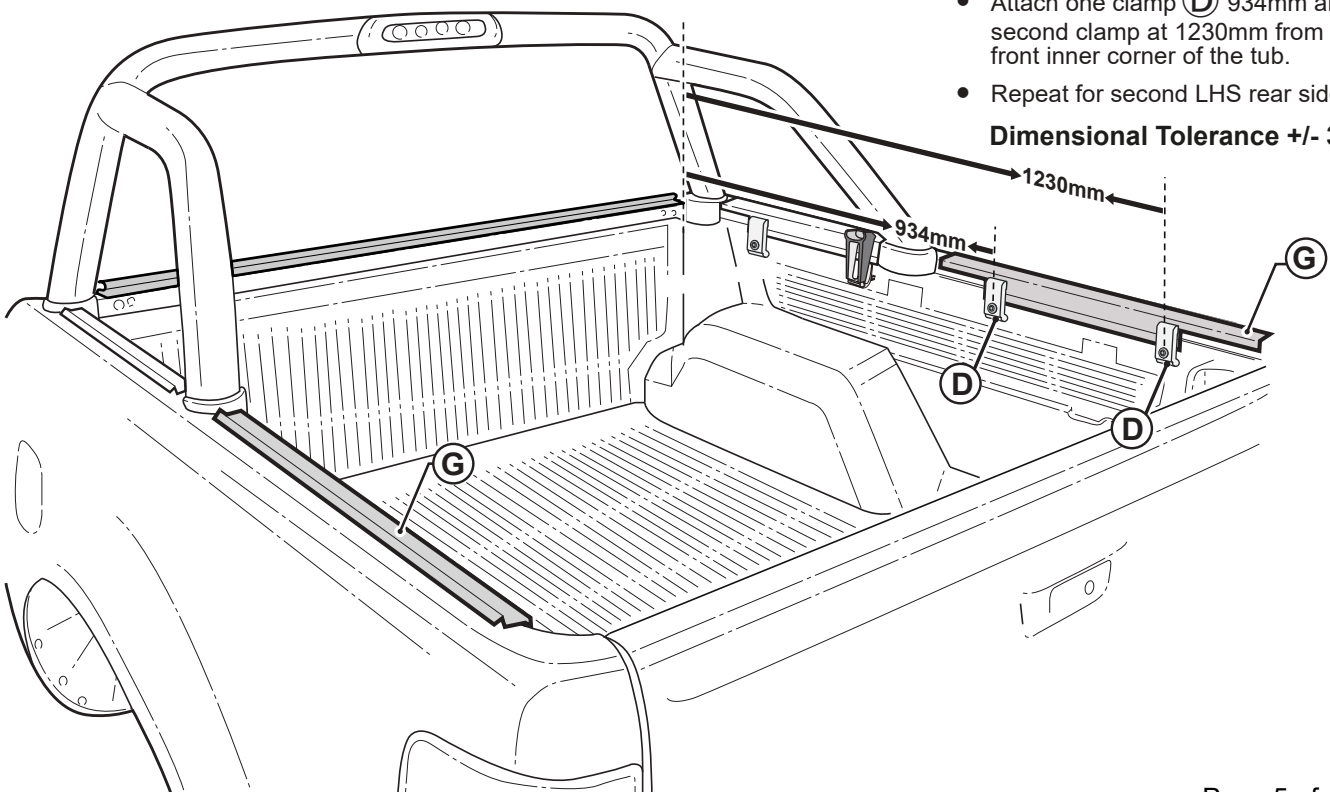

4 FIT THE SUPPORT BAR

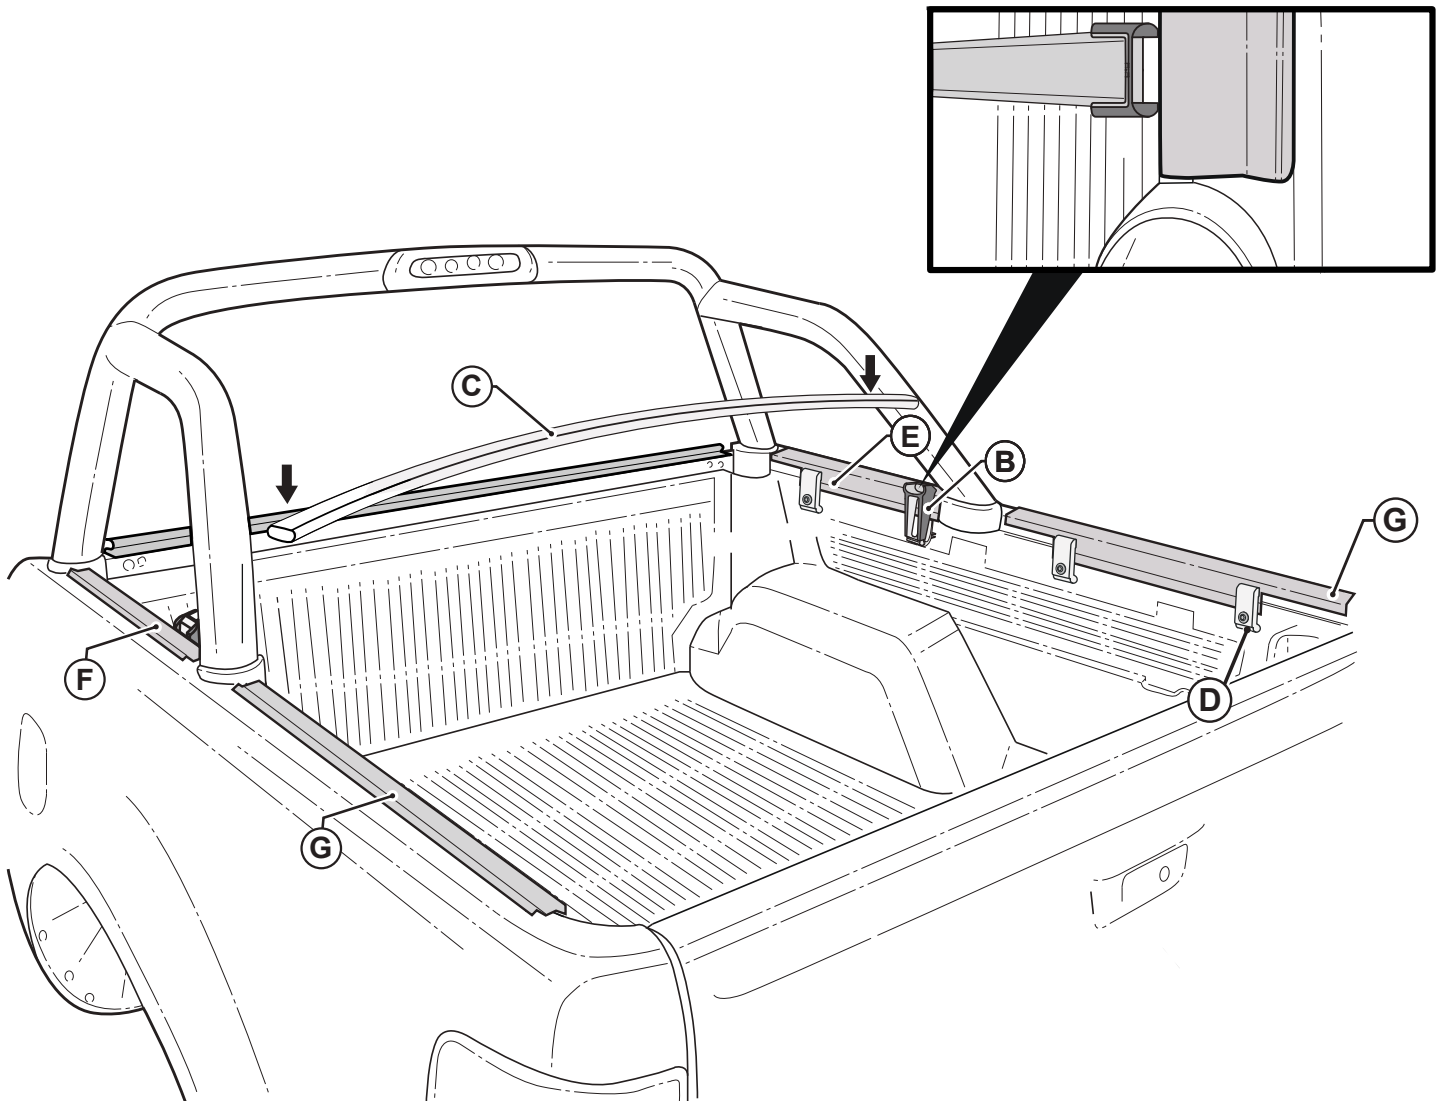


- Rotate the Support Bar (C) 90° and push into the Patented Adjustable Bar Bracket (B).
- Ensure it is seated firmly into place by pushing lightly in the centre of the Support Bar (C).

5 ATTACH THE TAILGATE RAIL


STEP 5.1

- Remove the Tailgate Liner & Strip (if fitted).

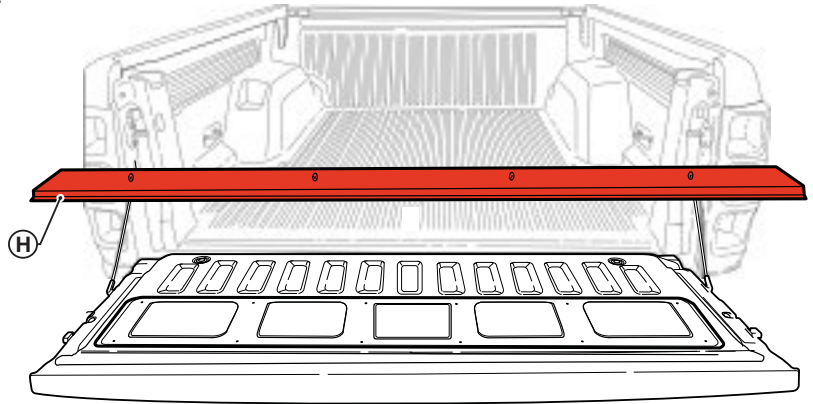


STEP 5.2

- Center the rail and align the inside edge of the rail, then mark 4 holes using the tailgate rail as template for drilling holes. Then remove rope track before drilling the holes.
- Use a 4.2mm drill bit to drill the holes into the 4 marked positions on the tailgate.
- Deburr and remove shavings after drilling. Clean with surface cleaning wipe (L). Carefully apply rust preventative (M) into drilled holes.


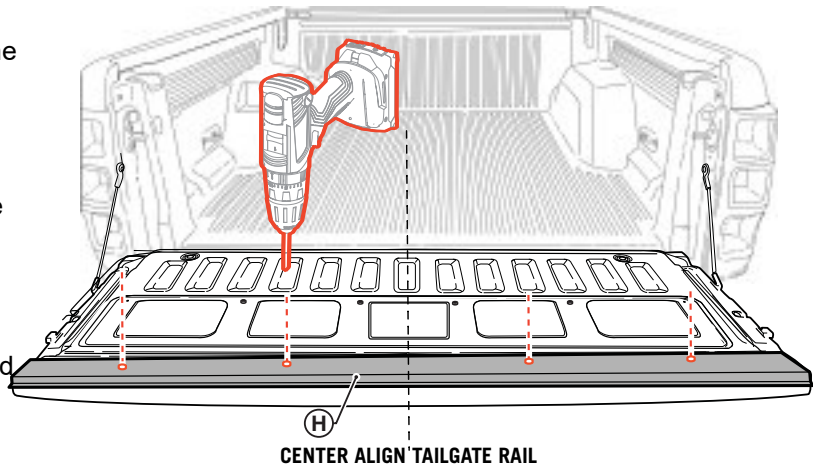


STEP 5.3

- Use the re-install kit in this step if required.
- Clean the top edge of tailgate with alcohol wipe (L).
- Remove the red backing tape from the underside of the tailgate rail (H), then center the rail and align the inside edge of the rail with the inside edge of tailgate. Align holes on the tailgate rail to that of the drilled holes on the tailgate and firmly press down.
- Rivet the holes with rivets (I), securing the rail onto the inside edge of the tailgate.
- Fit edges of the tailgate liner into original position and re-install original screws to secure the liner on top of the tailgate rail (H).

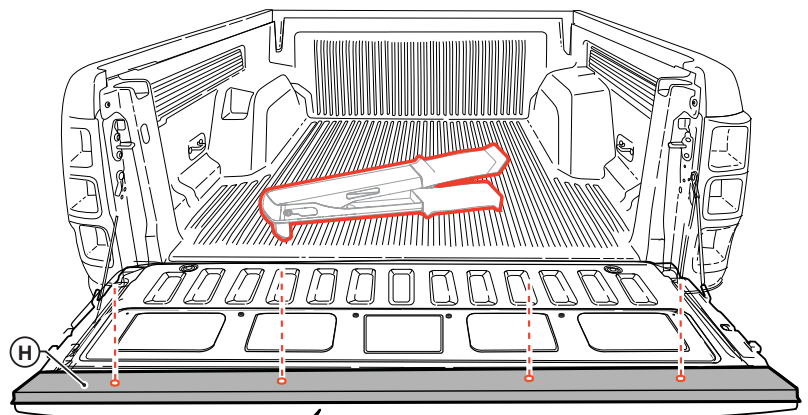


Clean this section of the tailgate thoroughly with alcohol wipe (L).

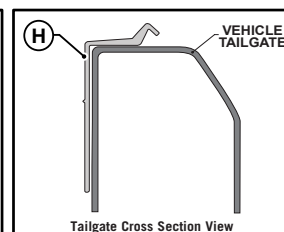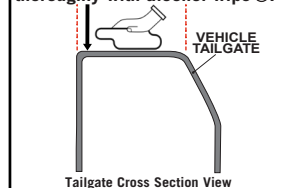


Important

- Alcohol wipe tailgate rail for re-attachment of tailgate liner double sided tape.

With Tailgate Liner
Finished Appearance

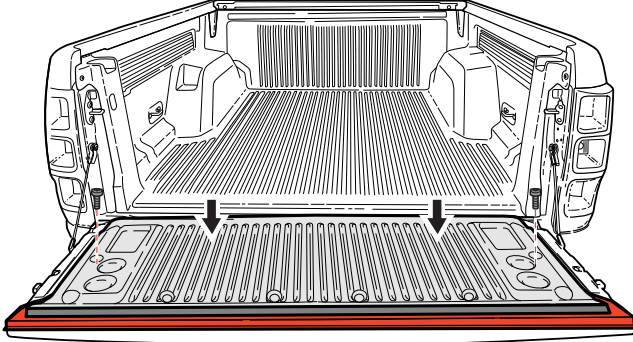


No Tailgate Liner
Finished Appearance

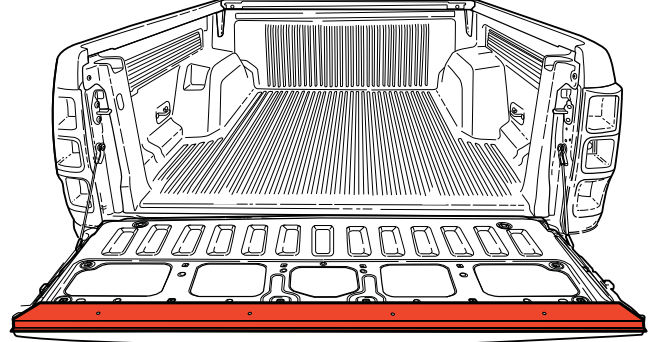


6

TETHERING METHOD (This step is carried out in combination with the 7th step.)

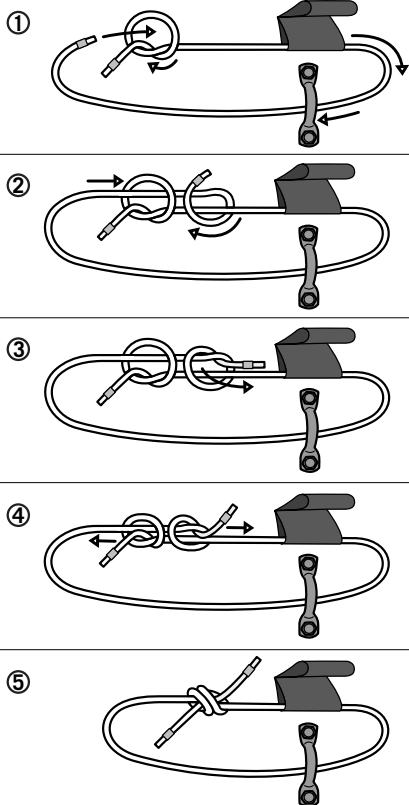

- Use the tethering rope (K) to do a Fisherman's knot with the second set of front loops in the tonneau cover as shown.
- This tethering step is to be repeated for both the front corners.

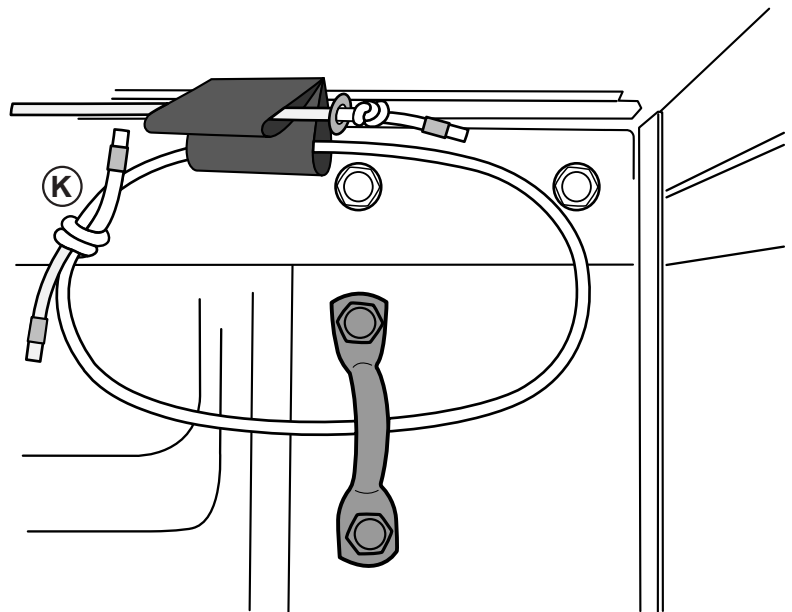


7 FIT THE TONNEAU COVER

- Place the front of the cover (A) in-between the tub & cab and lock the plastic J Retainer into the rope track (I)
- Engage the back of the cover first on the tailgate rail, followed by the sides. Use the pull tabs to help pull the cover into place.

Note: Ensure the support bar is fitted underneath the Tonneau Cover to prevent water ingress and to keep the cover tight.

Use the pull tabs to assist whenever you open or close your cover.

Note: Fitment will be tight straight out of the box, but this should loosen up a little after a week or so.

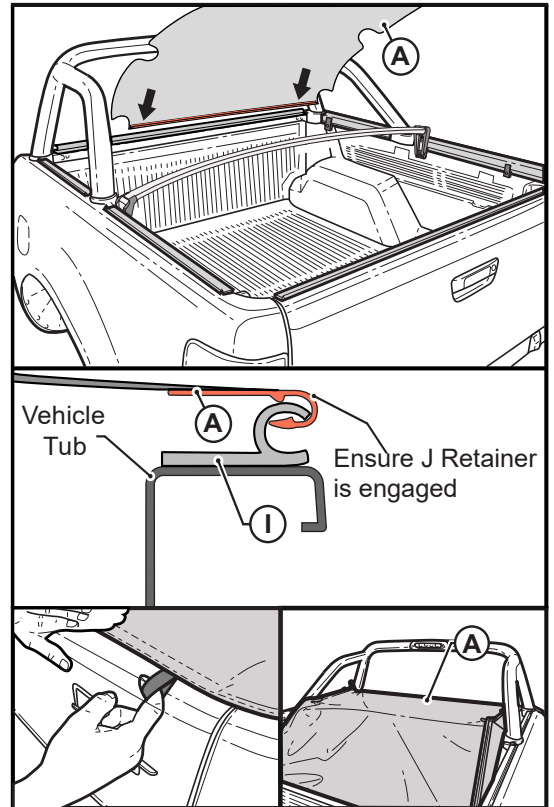


ADJUSTING THE TENSION OF THE COVER

- To adjust the tension of the cover, you must adjust the height of the support bar. To do this, we have designed a patented adjustable bracket system which will allow you to freely adjust the height to any position within the range of the bracket.
- Simply loosen the bolt which goes through the Bar Bracket (B) and Clamp (D) then move the bracket either up or down until the bolt is at your desired level. Re-tighten the bolt.
- Your Adjustable Bar Bracket has a large tension range.
 - “L” lowers the height and loosens the cover.
 - “H” increases the height and tightens the cover.

“L” set here if cover is tight and hard to clip on.

“H” set here if cover is loose or if water is pooling on it.

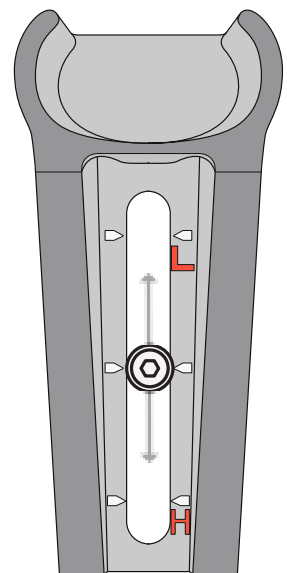


INSTALLATION OF THE TONNEAU COVER IS COMPLETE!

HOW TO USE THE OVERSIZED LOAD SYSTEM


STEP 1

- Place the load into the ute tub then drape the tonneau cover over it as shown.

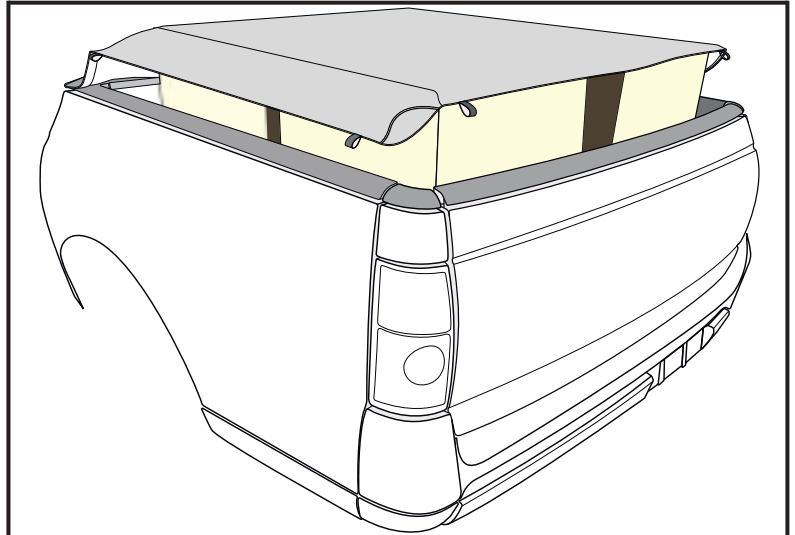


STEP 2

- Engage the Rope Hooks from underneath the Tonneau Cover and clip each one onto the Tub Rail.

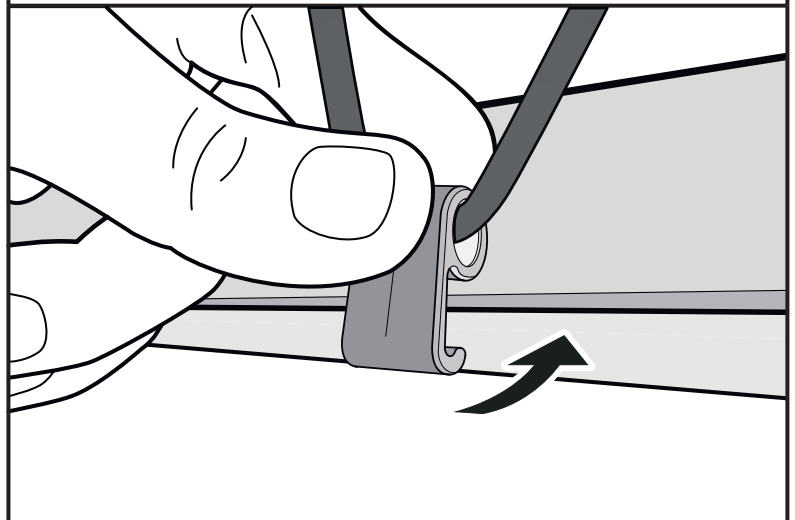

STEP 3

- Engage all Rope Hooks for a secure fit.

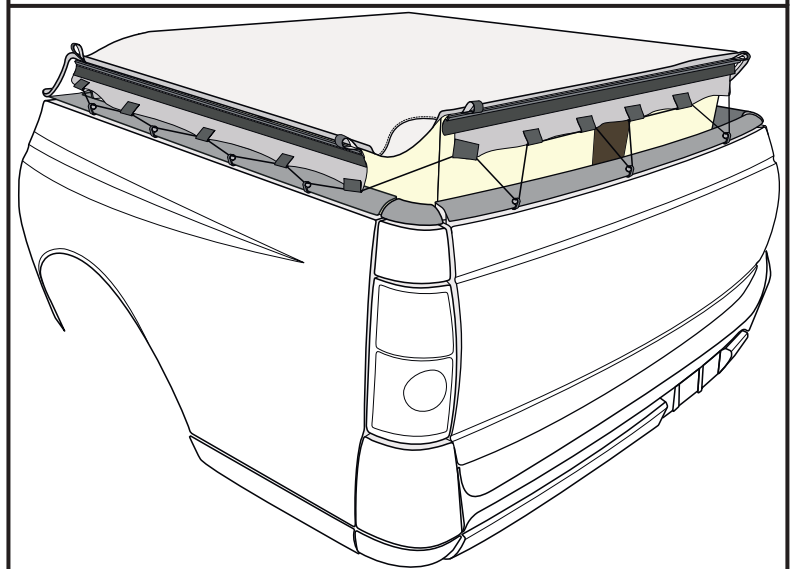

Important



The Tonneau Cover is not designed to be a load restraint. You **MUST** securely tie down your load first and then use the Oversized Load Cover System.